

# Handyman 500

Pro Series

**Product Name:** **Product Number: 14061R**

**Description** Elwis Handyman 500  
500/240/60 lm

## Specifications

Housing material	Alu
Lens material	PC
On/off switch	Press once: 500 lumens Press twice: 250 lumens Press three times: 60 lumens (torch) Press four times: Off
Battery type	3.7V 1900mAh 7.03WH
LED	Yes
Red LED	No
Colour temperature (Kelvin)	FRONT: 6000K TORCH: 7200K
Colour rendering index (CRI)	FRONT: >80 TORCH: >70K
Output (lumens)	500/240/60 lm
Run time (hours)	2/4/8H
Beam distance	FRONT:1.6M TORCH:0.9M
Adjustable beam - zoom in and out	No
Max charging input	5V1A
Charging time (hours)	3.5HRS
Charging indicator	Yes
Battery level indicator	Yes
Charging port	USB C
Cable for charger, 1 m (supplied in box)	Yes
Interchangeable battery	No
Protection class	IK07/IP20
Operating temperature range (Celcius)	-10° to +45°C
Magnet	Yes
Declaration of conformity	Yes
Additional info	
UKCA & CE	Yes



## General Information

Lamp weight (g)	173g
Lamp dimensions (cm)	200*34.7*13.5MM
EAN code box (1 pc)	57 03296 14061 4
EAN code inner carton =	N/A
EAN code outer carton =	57 03296 14161 1
Harmonized standard code	8513100000

## Packaging

Description	"PRO" design printed box
Box dimensions (cm)	222*42*42mm
Box weight (g)	15g
Carton quantity (pcs)	40
Carton size (cm)	?
Carton weight (kg)	12kgs

## Features

### The following Safety Instructions apply (Where relevant)

#### General Safety Instructions

Do not shine in eyes. Do not immerse in water or other liquids. Do not cover the lens when turned on and do not place the product with the lens/light source direct on a surface. Do not operate if the housing, wiring compartment or lens is open, missing, or damaged. Allow the product to cool down sufficiently before cleaning. Do not use cleaners that contain abrasives or solvents. Use on flat, stable surfaces. Do not operate with wet hands. Do not disassemble. Do not attempt to repair if damaged. Repairs must only be carried out by the manufacturer or authorized service representative. Clean with a dry clean cloth. Please note that lighting products generate heat – if the heat exceeds 60 degrees turn off the product.

#### Safety Instructions - rechargeable products

Always inspect the charging plug - it must look dry, clean and undamaged. Only use the supplied charging cable and/or charger. Do not use a modified or damaged charger. Do not try to charge the product if it looks damaged. Do not turn on when charging. Do not leave on charge for over 24 hours. Do not charge below 0°C, above 40°C or at high humidity. Do not leave the product on charge near flammable material as it can cause a fire. Never charge without supervision. Always pay extremely attention to U-ion batteries as they can explode. If not handled properly, the battery may cause explosion, leakage or fire. Do not expose batteries to direct sunlight. Do not disassemble or modify batteries. Do not apply strong impacts to the battery. Do not get batteries wet. Keep batteries out of reach of children and animals. Do not place batteries on top of an electromagnetic field. Do not use batteries that work for an extremely short period of time. Do not short-circuit the battery. Do not put a battery in a microwave oven, pressure container, or other such devices. Do not recharge batteries where heat can build up. If not handled properly, the battery may cause explosion, leakage, or fire.

#### Safety Instructions - alkaline batteries

Only use new and undamaged batteries. Remove batteries from a device that is not being used for an extended period as they can leak. Never try to charge a non-rechargeable battery.



Elwis Lighting A/S, Sandtoften 11, 2820 Gentofte, DK  
www.elwislighting.com - Tel. +45 70 20 10 24

Version 1 06/2022  
© Elwis Lighting 2022  
All details without obligation